

All anodes need to be hardwired to ground




Shown without wedge



Shown with Propshaft Collar



Boat shown with Power Wedge

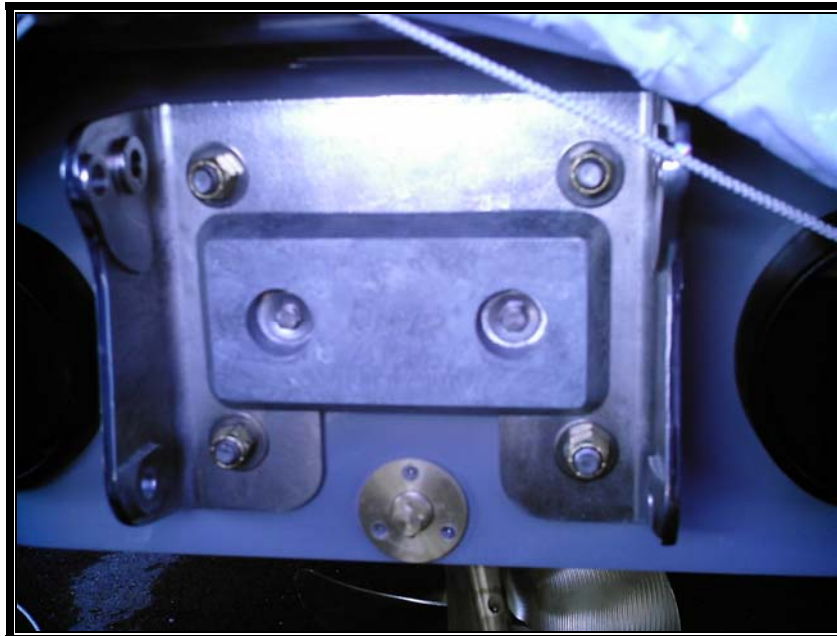

Standard Wedge