



G3 BIMINI INSTALLATION INSTRUCTIONS

- 1) Determine the location of the accon mount on the tower.
- 2) Install the accon to the tower being sure that the button is toward the front. Note the hole in the accon mount is not centered. See photos 1 & 2.
- 3) Install the collar to the tower. Measuring from the center of the light as seen in photo 3. measure and mount the collar but do not tighten.
Approximate dimensions are 15-on center for the narrow bimini (see photo 4) and 15-1/2" on center for the standard bimini-(see photo 5).
NOTE: These are approximate measurements, some adjustment may be required to achieve the optimal fit.
NOTE: The collar should be mounted to the tower so it is parallel to the floor with the flat surface on the top as seen in photo 6.
- 4) Install the bimini to the sleeve on the collar and the ends of the poles into the accon mounts. The top should be tight and the cut outs should be centered evenly. Tighten the collars.

WARNING:

Do not trailer the boat with the bimini top in the up position. Always stow the bimini for road travel. Minor adjustments may be necessary at owners discretion.



Photo 1.



Photo 2.

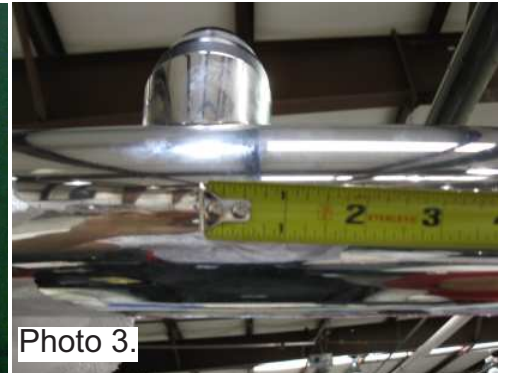


Photo 3.

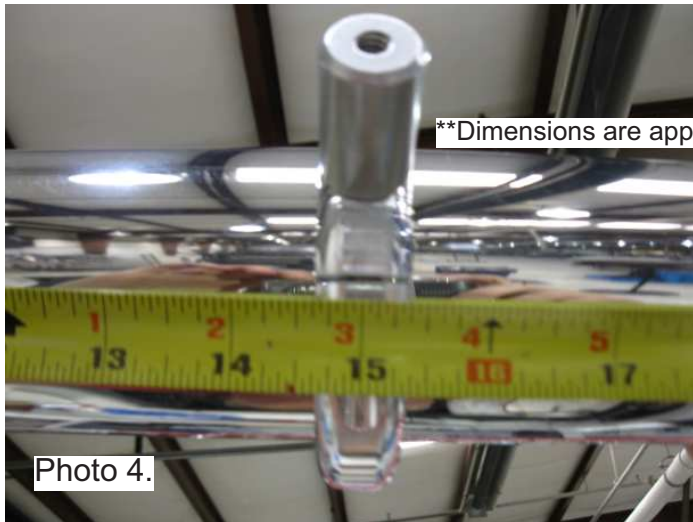


Photo 4.

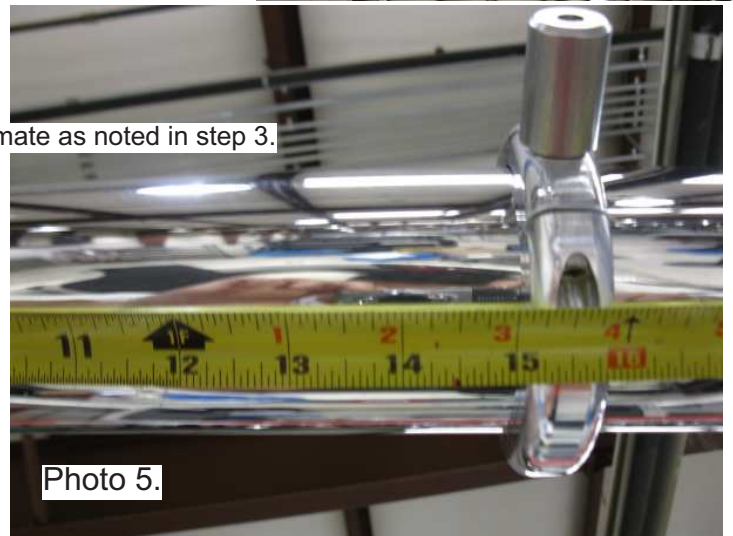


Photo 5.



Photo 6.



Photo 7.